
 







Getting Started

Power On – Insert the battery (AA) into the pager. If the battery is in, press and hold the  **READ Key** for 2 seconds. The pager will display the **STANDBY SCREEN**. After a short time, the display screen will go blank to preserve battery power. Press any key to return to the **STANDBY SCREEN**.




Power Off – Go to the **STANDBY SCREEN**. Hold the  **ESCAPE Key** for 2 seconds to display the **SETTINGS** Menu. Using the  or  **Keys**, scroll to the  icon. Press the  **READ Key** twice to confirm your choice.

Backlight – Press and hold the  **Read Key** to activate or deactivate.

Read Messages

The pager will display a new message when it is received. Each message is allocated a slot number (ie 01, 02, 03 etc). To read stored messages, press the **READ Key** from the **STANDBY SCREEN**. Scroll through messages with the **Left** or **Right Keys** and press the **READ Key** to confirm selection. You will be returned to the **STANDBY SCREEN** automatically if you scroll to the end of the message queue. If a message is longer than the screen width **Right**, use the **READ Key** to view the rest of the message.

Message Display

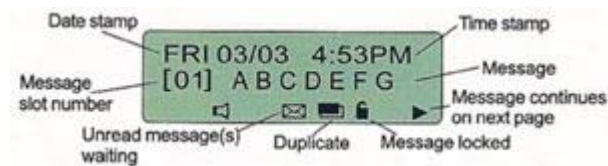










Delete messages












While message is displayed – Hold the **ESCAPE Key** for 2 seconds to view the **DELETE MENU Screen**. Using the **Left** and **Right Keys**, select between **LOCK** (locks current message), **DEL** (delete current message) or **D.ALL** (delete all messages). Select (lock current message) to prevent the current message from being deleted. Press the **READ Key** to confirm selection. The **ESCAPE Key** takes you back to the **STANDBY SCREEN**.

Settings Menu



Hold the  **ESCAPE Key** to select the **SETTINGS Menu**. Scroll through the menu using the  or  **Keys**. Press the  **READ Key** to confirm your selection. Use the  or  **Keys** to modify options and the  **READ Key** to proceed to the next option or to enter your changes. The  **ESCAPE Key** takes you back to the **STANDBY SCREEN** without saving changes. Note: In the **TELEPHONE BOOK**, the  **READ Key** must be pressed until it reaches the end of the *Name* field, before it will move along to the *Number* field.

ICONS

 Pager ON	 Current Message is a Duplicate
 Beeping Alert	 Message Locked
 Vibrate Alert	 Out Of Range Indicator
 Daily Alarm ON	 Low Battery Indicator
 Melody	 Message continues on next page
 Unread Message	

FUNCTION KEYS

 Move to previous message	 Message READ Key
 Move to next message	 ESCAPE (back to previous menu)